



NOTES:

1. OPERATION

- 1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
- 2. SWING COVER OFF OF CONTACTS.
- SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
- 4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.
- 2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH0-RGB10J

			METRIC	TOLERANO	NCHES)	e		L COMPO	NENTS COR	PORAT	ION
				OTHERWISE SPECIF 1 PL +/- REF 2 PL +/- REF ANGLE +/-	- REF. - REF.	TITLE	NO SOLDER 10mm RGB FLEX TO FLEX TAPE CONNECTOR				
	RELEASED	3/31/14	DRAWN BY L. WENGSTROM	APPV'D BY	DATE 3/31/14	SIZE A	55335	NO.	ZFS-CH0-R	GB10J	
REV. NO.	DESCRIPTION/ECO	APPV'D DATE	- CAD DRAWING - MANUAL REVISIONS NOT PERMITTE			SCALE		RELEASED 3/31/14	REVISION DATE	REV. NO.	SHEET 1 OF 1