

 

NOTES:

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH140-8I

			METRIC  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-							
RELEASE & CANCEL PL-1301-03			3/5/13	DRAWN BY L. WENGSTROM	APPV'D BY L.R.	DATE 3/5/13	SIZE A	FSCM NO. 55335	DRAWING NO. ZFS-CH140-8I			
- CAD DRAWING -			MANUAL REVISIONS NOT PERMITTED				SCALE	NONE	RELEASED DATE 3/5/13	REVISION DATE	REV. NO.	SHEET 1 OF 1